



TSUNAMI T1 FRONT LIP SPOILER FOR FORD MUSTANG 98-UP INSTALLATION INSTRUCTIONS

IMPORTANT:

READ MOUNTING INSTRUCTIONS THOROUGHLY BEFORE STARTING! TSUNAMI PRODUCTS ACCEPT NO LIABILITY FOR DAMAGE INCURRED TO PARTS OR VEHICLES DUE TO IMPROPER PREPARATION AND/OR INSTALLATION PROCEDURES! DAMAGE CAUSED BY OR TO CARWASH FACILITIES IS THE RESPONSIBILITY OF THE VEHICLE OWNER! PARTS MODIFIED, PREPPED OR PAINTED CANNOT BE RETURNED! PLEASE REFER TO OUR PAINT INSTRUCTIONS FOR PAINTING.

PARTS LIST

Self-tapping screws – 4
3M double sided tape
3M adhesive promoter

TOOLS REQUIRED

Phillips screw driver
Power drill
Scotch bright pad



1) Clean the front spoiler and rub with a scotch bright pad to the area where the 3M tape will be placed. Apply the 3M adhesive promoter to the cleaned area on the side skirt. Then apply the 3M double-sided tape in 3 places, the side corners and in the middle.



2) Clean the front bumper of the car and then start to peel the red backing off the tape. Only peel 2" to 3" of the backing and fold it over the top of the tsunami side skirt.




3) Place the front spoiler onto the front bumper and line it up. Make sure everything is lined up before removing the tape.



4) While the front spoiler is on the car slowly pull the red backing off. Start on the side corners where the front lip bends. After removing the red backing, press firmly on the spoiler to make sure it is stuck in place.



5) now remove the tape from the front part of the bumper. Press firmly and make sure the tape sticks.

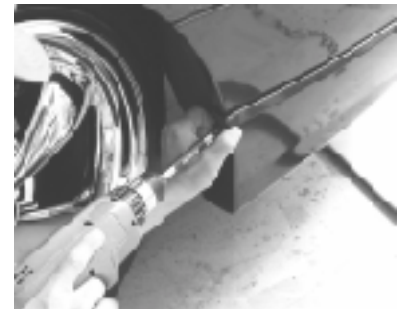

6) Use 2 self tapping screws to fasten the front spoiler from the back side. This will secure the front spoiler to the bumper and the installation is complete.