



TSUNAMI T2001 SIDE SKIRTS 01-UP CIVIC INSTALLATION INSTRUCTIONS

IMPORTANT:

READ MOUNTING INSTRUCTIONS THOROUGHLY BEFORE STARTING! TSUNAMI PRODUCTS ACCEPT NO LIABILITY FOR DAMAGE INCURRED TO PARTS OR VEHICLES DUE TO IMPROPER PREPARATION AND/OR INSTALLATION PROCEDURES! DAMAGE CAUSED BY OR TO CARWASH FACILITIES IS THE RESPONSIBILITY OF THE VEHICLE OWNER! PARTS MODIFIED, PREPPED OR PAINTED CANNOT BE RETURNED!

PARTS LIST

- Self-tapping screws – 12
- 3M double sided tape
- 3M adhesive promoter

TOOLS REQUIRED

- Phillips screw driver
- Power drill
- Scotch bright pad

NOTE: DO NOT REMOVE THE STOCK FACTORY SIDESKIRTS. THE TSUNAMI T2000 SIDE SKIRT SYSTEM IS MADE TO GO OVER THE STOCK SIDE SKIRTS.




1) Clean the side skirt and rub with a scotch bright pad. Apply the 3M adhesive promoter to the cleaned area on the side skirt. Then apply the 3M double-sided tape to it.



2) Clean the side of the car and then start to peel the red backing off the tape. Only peel 2" to 3" of the backing and fold it over the top of the tsunami side skirt.



3) Remove the screws from the front and the back inner fender wells.

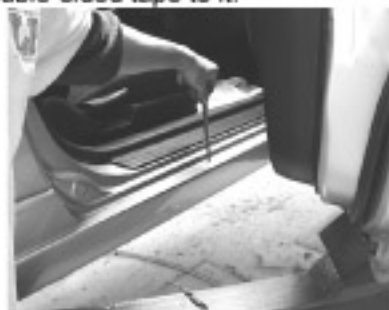

4) Then place the side skirt back onto the car and slowly pull the red backing off.



5) Use a 2 self tapping screws to fasten the side skirt from the front and back. (Note: make sure you remove the factory screws first and then screw a self tapping screw through to were the factory screw use to be.



6) under the car, were the sides skirt flap and the frame body match up, use a self-tapping screw to secure the two together. Do this for all the flaps on both side skirts.