





4) Match up the bracket to the tsunami front bumper and drill out the necessary holes. They should be marked on the tsunami bumper. Then drill out the holes from the top of the bumper.

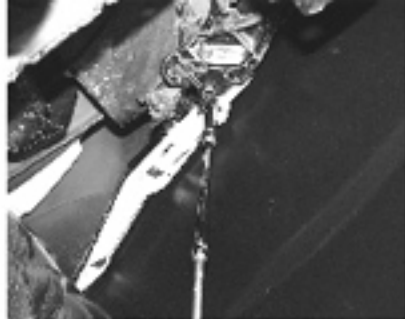


5) Place the fender bumper bracket underside of the bumper and then reattach the bolts through the bracket and bumper into the fender. Secure tightly.

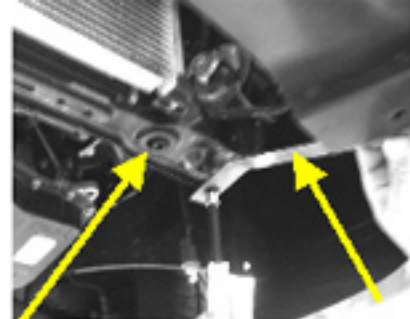

6) Then take the z bracket and attach it to the radiator support with the 10 mm bolt.



7) Now pull the bumper and so that it is in the right position and it is not sagging. Take the z bracket and line it up, then attach it to the front bumper from the bottom with the 10mm bolt and nut. Do the same for both sides of the bumper

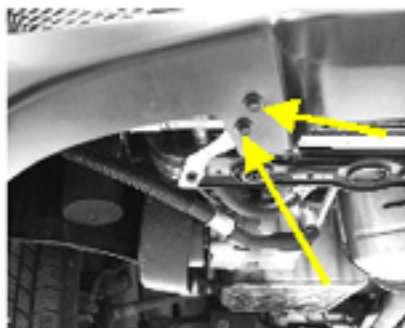

8) After securing the bolt, attach a second bolt through the bracket and bumper for extra security.



9) Reattach the fender liners to the front bumper using a self tapping screw. Do this for both sides.



10) Your finished